MIDMARK®

Installation/Operation Instructions

9A22100X ONE ARM WRIST REST ASSEMBLY

KIT COMPONENTS

Part Number	Description	Qty.
9A22100X	One Arm Wrist Rest Assembly	1
003-0796-00	Installation / Operation Instructions	1

REQUIRED TOOLS

3/8" Socket & ratchet
Torque Wrench (Must measure up to 140 "/ lbs. [16 N•M]).

INTRODUCTION

Provides a headrest with one back mechanism that is less maneuverable but gives more room in back of chair during procedures. Attached wrist rest provides wrist support when the chair is in flat position during procedures.

WARNING

Assure all positions are solidly locked to prevent sudden movement during procedure.

INSTALLATION

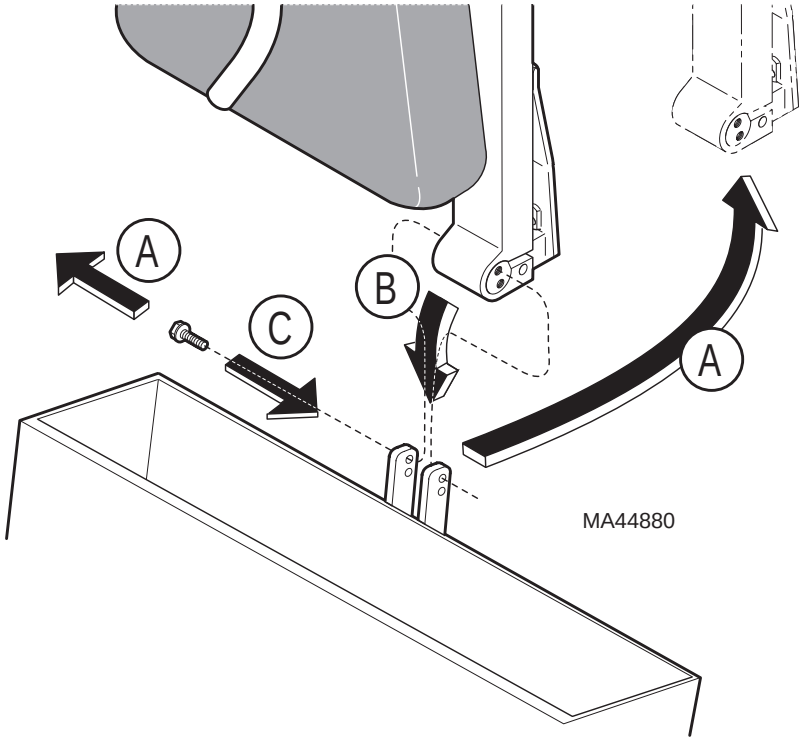

A. Remove four screws and existing headlock assembly.

B. Position 9A221 headlock assembly on headlock mount.

EQUIPMENT ALERT

Tighten four mounting screws to a torque of 75 to 135 in-lbs. (8.4 to 15.2 N•M).

C. Install and tighten four new screws.

© Midmark Corporation - 1998

OPERATION (1)

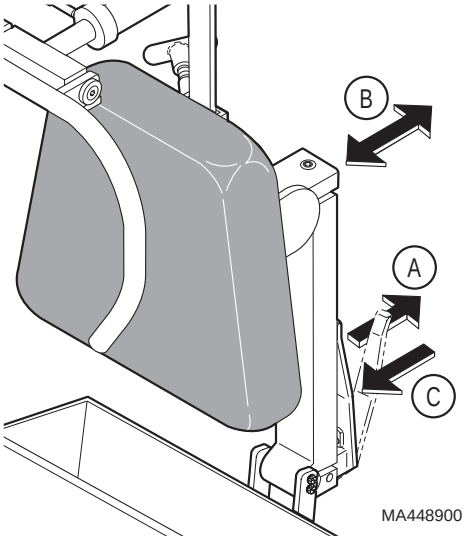

A. Pull head pivot handle outward.
B. Place headrest in desired position.
C. Push head pivot handle inward.

OPERATION (2)

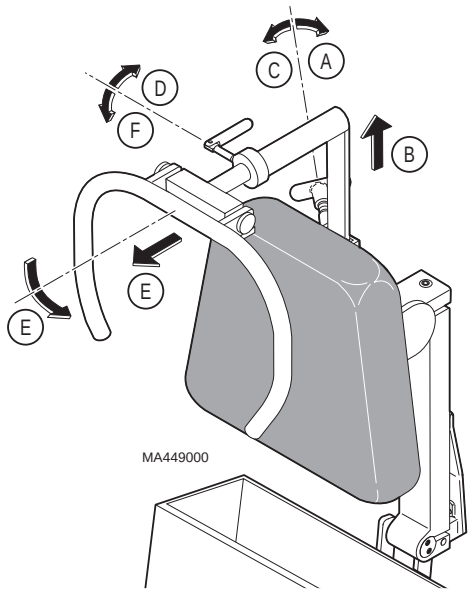

A. Loosen T-handle.
B. Place wrist rest assembly at desired position.
C. Tighten T-handle.
D. Loosen drop handle.
E. Place wrist rest in desired position.
F. Tighten drop handle.

© Midmark Corporation - 1998